

Specification

FM Tuner Section	
Tuning Range	87.5-108.0 Europe/China; 87.5-107.9 (U.S.A.)
If Range	10.7MHz
Usable Sensitivity	15dB
Signal-to-noise Ratio	50dB
Stereo Separation	30dB (1kHz)
Frequency Response	30-15kHz

User Manual

Simple troubleshooting guide

Problem	Cause/Solution
No power	★ Check and make sure whether the fuse is blown. Replace with a new one if necessary. ★ Press the RESET button.
Some errors occur in the LCD or no function when pressing the buttons.	★ Check and make sure whether the antenna is inserted or the antenna is properly connected.
Unable to receive radio stations.	★ Insert the antenna or connect an antenna or connect a properly grounded antenna.
Poor effect on receiving.	★ Antenna may not be fully extended. Fully extend the antenna or replace a new antenna if broken. ★ The broadcasting signal is too weak. ★ The antenna is poorly grounded. Check and make sure the antenna is properly grounded at its mounting location.
Cds can not be loaded.	★ Check if there is a mechanism problem and there is already a CD in it.
The stereo indicator "CD" is flashing	★ Turn frequency inaccurate. ★ The broadcasting signal is too weak. (Set to the MW mode.)
noise noise	★ The car is dirty or damaged.

★ Note: If any of the problem persist after check list had been made, consult your nearest service dealer. Never attempt to disassemble your unit by yourself.

MODEL ZYTTW-806 CD/MP3/USB / SD/MMC PLAYER WITH AM/FM/STEREO DIGITAL PLL TUNING RADIO

7

Notes on installation

- (1) INT button During play back, press "INT" button, one of the number button 11 to play the first 10 seconds of each track on the disc, the display will show "INT", track number and elapsed time." (See the picture.) , which indicates INT function is already activated. Press "INT" button once more to revert to normal play back.
Press 12 "RPT" button to perform repeat playing function when you need to repeat playing the track you like . in mp3, cd version, Press "RPT" button at the first time "RPT" appears (Shown as track), which indicates repeat playing one track starts . Press "RPT" button again to stop repeat .
During playback,Press 13 "RDM" button, and "RDM" appears on the display (See the picture) , which indicates RDM function is carried out. The unit plays any track at random . Press RDM once more to return to normal playback mode .
- (2) RPT button Repeatedly press ⑪ (SEL) button to select the desired mode in the following order: \downarrow -VOL \downarrow BAS \downarrow TRE \downarrow BAL \downarrow FAD \downarrow EQ \downarrow LOUD OFF
- (3) RDM button When you connect mini USB or SD card, the system automatically play int. You can select track in it with \downarrow -SEL \downarrow button to return to other mode.
- (4) 5-10 button When you insert Audio frequency data line with AUX IN the sound Enlarge signal.
- (5) 6+10 button Press this button you can adjust the volume Strong or weak
- (6) SEL/Volume Button Repeatedly press ⑪ (SEL) button to select the desired mode in the following order: \downarrow -VOL \downarrow BAS \downarrow TRE \downarrow BAL \downarrow FAD \downarrow EQ \downarrow LOUD OFF
- (7) USB When you connect mini USB or SD card, the system automatically play int. You can select track in it with \downarrow -SEL \downarrow button. Press mode Remote Control Receiver
- (8) SD button (9) IR Remote Control Receiver
- (10) RESET button Operating the unit for the first time Or after replacing the car battery you must reset the unit .Press (RESET) Button with a pointed object to set the unit to initial procedure.

- Note: When some errors occur in the LCD, display, you can also press RESET button to resume to normal, and it will erase the clock setting and some memorized functions.
- (11) FM Tuner Section
- (12) Precautions
- This unit can play the following discs only:
- | Type of disc | Laser on the disc | Recorded material | Size of disc |
|--------------|-------------------|-------------------|--------------|
| MP3 | MP3 | Sound only | 1.2cm |
| CD | disc | Sound only | 1.2cm |
- Note: This unit is compatible with CD-R/RW, Ver. 1.0 & Ver. 2.0, CD-RW, Ver. 1.1 & Ver. 1.2.
- (13) Notes on disc handling
- Do not attempt to modify the unit, modifying the unit may cause an accident.
- Do not work in extremely high or low temperature. Recommended temperature is between +60°C and -20°C.
- To enjoy optimum sound and images while playing, handle the discs as follows:
...don't touch the edge or end of disc
...clean disc with soft cloth
...don't touch the surface
- (14) Notes on disc cleaning
- ...do not use your CDs with poor residue or ink attached
- (15) Notes on disc storage
- ...do not use CDs with labels or stickers
...store with care when not in use
- (16) Notes on disc removal
- ...Gently press the center of the disc, when open disc from the center out (shown on picture)

Thank you for using our company multimedia player!

To operate the unit correctly, please read the owner's manual carefully before using the unit. Keep these instructions and retain this booklet for future reference.

CONTENTS

Welcome! ----- 1

Notes on Installation ----- 2

Front panel ----- 3


CD-MP3 operation ----- 4-5

Remote Control ----- 6

Connecting Wires to Terminals ----- 6


Simple troubleshooting guide ----- 7

Operations of Remote Control

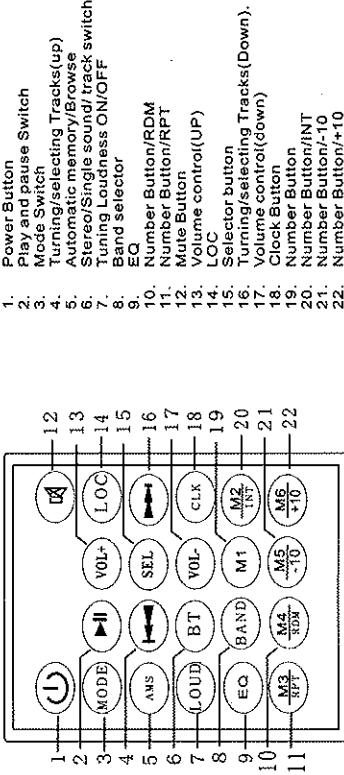


(optional)

Connecting Wires to Terminals

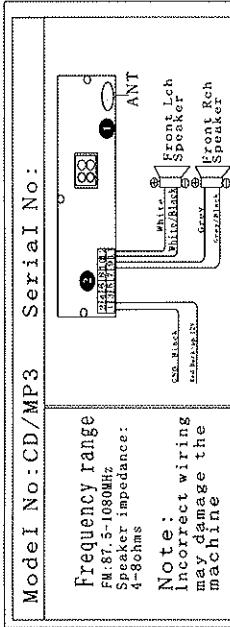

⑥

front panel

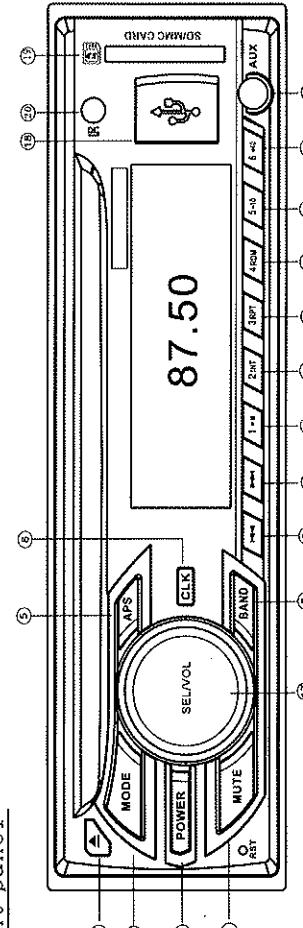

①

① Eject Button press this button ▲ to eject the disc.

② MODE Button Press mode to Play radio or disc → RADIO → PLAY → AUX ←

③ Power Button Press power button to switch power.

④ Mute Button Press the button to mute or unmute.
When AMS mode is carried out, INT appears on display.

⑤ AP.S Button Press this button to search each stored stations.
You can press number button 1-6 or
APS button to select stored stations.
Press and hold APS button to store a station in any of
the number from 1-6.

⑥ Clock Button Press the button and the current time will be
displayed and returned to previous status in 5
seconds.
Press and hold the button until the Hour or Minute
digital flash, then press VOL button adjust time.
Press CLOCK button again to confirm your adjustment.

⑦ Band Button Press the button repeatedly to select
bands in the following order.
→ FM1 → FM2 → FM3 → AM1 → AM2 → AM3

⑧ SEL+ ▲ UP Automatic Tuning:Press ⑧⑨(▲ or ▼)button continuously to search automatically.
⑨ SEL- ▲ DN Select a station upward or downward respectively.

⑩ Manual Tuning:Press and hold ⑧⑨(▲ or ▼)button for more than 3
seconds , the radio automatically searches a station upward or down-
ward respectively and plays when a signal is received.

⑪ play/pause button

⑫ role play or pause function.

⑬